




Mounting Instructions SENTIR bumper

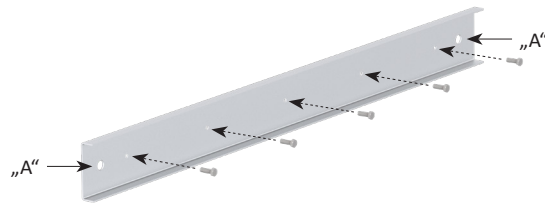

1. For the mounting of the bumper the mounting plate has to be fastened with M6 screws.
2. Drill a cable entry „A“ ($\text{Ø}18 \text{ mm}$) for the connection cable into an appropriate place on the mounting plate. If the bumper is supposed to be connected to another bumper, a further cable entry has to be drilled. In order to prevent damage of the connection cable, each cable entry has to be deburred **carefully** and provided with a protection sleeve!

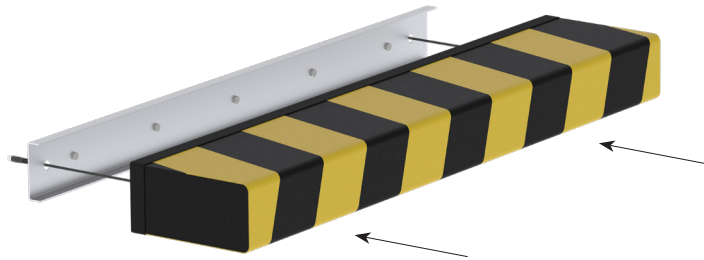

3. Lead the connection cable(s) through the protection sleeve(s) and slide the bumper onto the mounting plate up to the stop.

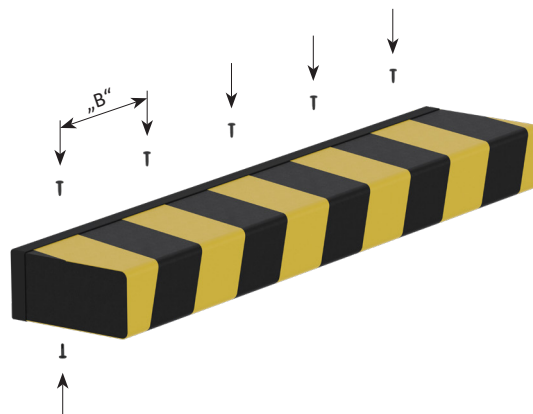

4. When everything is properly adjusted, screw (maximum tightening torque 2 Nm) the screws supplied into the plastic rail (groove) at an even distance „B“ (**not larger than 200 mm**). Check, if all installation components are firmly joined.